


EM8660 Wireless door / window contact (2-way communication)

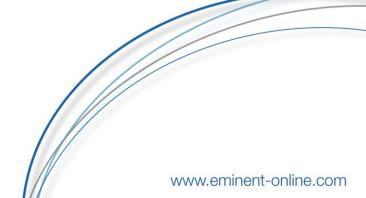



EM8660 - Wireless door / window contact

Table of contents


1.0 Introduction	
2.0 Front window/door sensor	2
3.0 Inside the window/door sensor	
3.1 Anti sabotage button	
3.2 Group settings (jumpers)	
4.0 Installation tips	
4.1 Register the window/door sensor	5
5.0 Frequently Asked Questions and other related information	6
6.0 Service and support	
7.0 Warning and points of attention	
8.0 Warranty conditions	
9.0 Declaration of Conformity	

1.0 Introduction

Congratulations with the purchase of this high-quality Eminent product! This product has undergone extensive testing by Eminent's technical experts. Should you experience any problems with this product, you are covered by a five-year Eminent warranty. Please keep this manual and the receipt in a safe place.

Register your product now on www.eminent-online.com and receive product updates!

2.0 Front window/door sensor

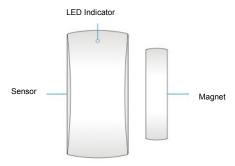


LED indicator:

Flashes 1x: Window/Door is detected as open.

Flashes quickly: Battery power low, exchange battery*

* You will receive a text message if battery level is low. The message contains the following information (up to sensor 9) sensor name with additionally the text 'battery almost empty'. From sensor 10 the name will be replaced for a zone nr. with additionally the text 'battery almost empty'.

3.0 Inside the window/door sensor

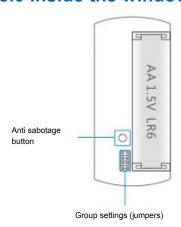

3.1 Anti sabotage button

If the sensor is opened this switch will detect it and trigger the alarm.


3.2 Group settings (jumpers)

Every sensor can be configured to be added to a single group by setting the jumper settings; home-group, normal group, single group or 24-hours group.

Bellow you will see an overview of the meaning and how to configure the jumper settings for that type of zone.

Remark: Determine before pairing with the alarm system in which group the sensor will be operational. Once the sensor is successfully paired with the system. The group cannot be changed after pairing!

Remark: If the group of a sensor needs to be changed All sensors need to be paired with the alarm system once more. It is not possible to remove one single sensor from a group! (See chapter "Delete all wireless sensors by text message")

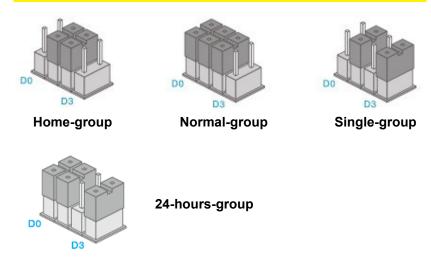


Remark: It's recommended to install detectors that needs to be operational 24-hours for example: smoke detectors in the 24-hours-group.

4.0 Installation tips

It's recommended to install the sensor on the frame (no movement) and to install the magnet on the door/window itself.

Notice: The magnet needs to be placed on the right side of the sensor. The red LED will light up every time the door/window is opened!

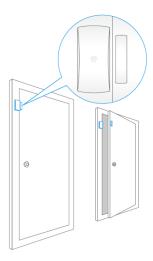

The distance between the sensor and the magnet must not exceed 1cm.

Mount both parts with the supplied double-sided tape. You can also choose to mount the sensor by using screws.

It's not recommended to install the sensor in a room with a lot of metal. Neither mount the sensor on constructions. Always check if the red LED will turn on when the door /window is opened.

4.1 Register the window/door sensor

Make sure the sensor and the magnet are located next to each other.

Enter the password and press button on the control panel.

The LED will turn on. Now separate the magnet from the sensor. The sensor will be triggered. If you hear a beep the sensor is registered to the system. If you hear 2 beeps this indicates this sensor is already registered.

5.0 Frequently Asked Questions and other related information

The latest Frequently asked questions for your product can be found on the support page of your product. Eminent will update these pages frequently to assure you have the most recent information. Visit www.eminent-online.com for more information about your product.

6.0 Service and support

This users manual has been carefully written by Eminent's technical experts. If you have problems installing or using the product, please fill out the support form at the website www.eminent-online.com/support.

You can also contact us by phone. Below you will find a list with phone numbers for each supported country.

Country	Phone number	Rate per minute*
Belgium (Dutch)	070 277 286	€0.30
Belgium (French)	070 277 286	€0.30
Denmark	+45 69918565	Local Costs
Finland	+35 8942415826	Local Costs
Germany	+49 (0)30 887 89 298	Local Costs
Italy	+39 0240042016	Local Costs
Norway	+47 21075033	Local Costs
Spain	807 080 042	€0.41
Sweden	+46 840 309985	Local Costs
The Netherlands	0900-3646368	€0.45
UK	+44 (0)203 318 9998	Local Costs
Hungary	1-4088902 (From	Local Costs
	Budapest)	
Hungary	06-1-4088902 (From the	Local Costs
	rest of Hungary)	
Hungary	+36 1-4088902	Local Costs
	(International)	

^{*} Rates mentioned in this table do not include cell phone charges.

7.0 Warning and points of attention



Due to laws, directives and regulations set out by the European parliament, some (wireless) devices could be subject to limitations concerning its use in certain European member states. In certain European member states the use of such devices could be prohibited. Contact your (local) government for more information about this limitations

Always follow up the instructions in the manual*, especially where it concerns devices which need to be assembled.

Warning: In most cases this concerns an electronic device. Wrong/improper use may lead to (severe) injuries!

Repairing of the device should be done by qualified Eminent staff. The warranty immediately voids when products have undergone self repair and/or by misuse. For extended warranty conditions, please visit our website at www.eminent-online.com/warranty.

*Tip: Eminent manuals are written with great care. However, due to new technological developments it can happen that a printed manual does not longer contain the most recent information.

If you are experiencing any problems with the printed manual or you cannot find what you are looking for, please always check our website www.eminent-online.com first for the newest updated manual.

Also, you will find frequently asked questions in the FAQ section. It is highly recommended to consult the FAQ section. Very often the answer to your questions will be found here.

8.0 Warranty conditions

The five-year Eminent warranty applies to all Eminent products unless mentioned otherwise before or during the moment of purchase. When having bought a second-hand Eminent product the remaining period of warranty is measured from the moment of purchase by the product's first owner. The Eminent warranty applies to all Eminent products and parts inextricably connected to and/or mounted on the main product. Power supply adapters, batteries, antennas and all other products not integrated in or directly connected to the main product and/or products of which, without reasonable doubt, can be assumed that wear and tear show a different pattern than the main product are not covered by the Eminent warranty. Products are not covered by the Eminent warranty when subjected to incorrect/improper use, external influences and/or when opened by parties other than Eminent.

9.0 Declaration of Conformity

To ensure your safety and compliance of the product with the directives and laws created by the European Commission you can obtain a copy of the Declaration of Conformity concerning your product by sending an e-mail message to: info@eminent-online.com. You can also send a letter to:

Eminent Europe BV PO Box 276 6160 AG Geleen The Netherlands

Clearly state 'Declaration of Conformity' and the article code of the product of which you would like to obtain a copy of the Declaration of Conformity.



Trademarks: all brand names are trademarks and/or registered trademarks of their respective holders.

The information contained in this document has been created with the utmost care. No legal rights can be derived from these contents. Eminent cannot be held responsible, nor liable for the information contained in this document.

 ϵ

Eminent is a member of the Intronics Group