

Midland G8 USER'S MANUAL

Thanks for choosing Midland! The **Midland G8** is a portable transceiver that is free use in almost all European countries. For further information, we suggest you look at the "Restrictions on the use" chart.

Combining the latest technology in radio communication along with a sturdy mechanical frame, the **Midland G8** makes the ideal and effective solution for the professionals who need to stay in touch with colleagues (construction sites, buildings, hotels, trade fairs, shows) or with leisure users that just want to keep up with friends and family. Its robust frame, ease of use and simple design mean that it is ideal for use in any activity.

Midland G8 is available in two versions:

- › Dual Band (PMR446/LPD)
- › E version (PMR446 only)

This manual is referred to both models and you will find highlighted the differences between the two versions.

Content

- › N° 1 **Midland G8**
- › N° 1 Single desktop charger
- › N° 1 Wall adaptor
- › N° 1 Battery pack
- › N° 1 Belt clip

Coverage/range

The maximum range depends on terrain condition and is obtained during use in an open space.

The only limitation to maximum possible range are environmental factors such as blockage caused by trees, buildings, or other obstructions. Inside a car or a metallic constructions, the range can be reduced. Normally the coverage in the city, with buildings or other obstructions is about **1 or 2 Km**. In open space but with obstructions like trees, leaves or houses the maximum possible range is about **4-6 Km**. In open space, without obstructions and in sight, like for example in mountain, the coverage can be more than **12 Km**.

Batteries and battery compartment

The transceiver accepts the supplied rechargeable battery pack or 4AAA alkaline/rechargeable batteries. To open the battery compartment: with the back of the radio facing you, unhook the battery holder in the lower part of the radio and gently slide the cover. Insert the battery observing the polarity and place the cover again.

Attention: the supplied battery pack must be recharged before the first use.

Warnings

- › **BATTERIES** - Strictly follow all the warnings on the batteries stated at chapter "Battery recharge".
- › **DO NOT OPEN THE RADIO FOR ANY REASON!** The radio's precision mechanics and electronics require experience and specialized equipment; for the same reason, the radio should under no circumstances be realigned as it has already been calibrated for maximum performance. Unauthorized opening of the transceiver will void the warranty.
- › **Do not use detergents, alcohol, solvents, or abrasives to clean the equipment.** Just use a soft, clean cloth. If the radio is very dirty, slightly dampen the cloth with a mixture of water and a neutral soap.

FEATURES

- › **New feature "Emergency CALL"**
- › **Midland G8** introduces an innovative and important feature: the channel **dedicated to the emergencies**. Radio communications usually happen between two or more users which are tuned on the same channel: it's not possible to transmit or receive to/from different channels. But **thanks to the "Emergency" function**, you can also keep a check on the Emergency channel: all users having a **Midland G8** can communicate on the tuned channel and at the same time can receive/transmit Emergency messages on the dedicated channel. Simply keep pressed the **EMG** button for 3 seconds and an emergency **CALL** will be sent to all the G8 within the range: they will be automati**CALLY** tuned on the "EC" channel (Emergency Channel).
- › **New feature "Manual Out of range"**: just press twice the **EMG** button and you will verify whether there are some radios within the range of your equipment.
- › **New feature "Vox TalkBack"**: if one radio is continuously transmitting in VOX, the Vox TB will automati**CALLY** stop the transmission after 20" to allow the transmission to the other users as well.

- › Power: 500mW (PMR446); 10mW (LPD)
- › Operating temperature: from -20° to +55° C
- › 38 CTCSS tones/104 DCS codes
- › Waterproof: IPX5
- › Emergency **CALL**
- › Out of range control
- › VOX adjustable in 3 levels and with “TalkBack”
- › INTERCOM
- › Vibra**CALL**
- › Keypad lock
- › Auto power save: automatic current economy circuit
- › Low battery indicator
- › Dual Watch
- › **CALL** with 5 selectable melodies
- › SCAN
- › Monitor
- › Out of Range
- › Roger beep
- › High/Low power
- › LCD Display with backlight
- › Power supply: NiMH battery pack 800mAh 4,8V or 4 AAA batteries
- › 2pin accessory plug
- › Weight: 112gr (w/o batteries)
- › Dimensions: 59x98x32mm
- › Battery life (in PMR446 band): more than 12 hours with 800mAh battery pack


Versions:

- › G8 Dual band (PMR446/LPD)
24 PMR446 channels (8+16 pre-set)/69 LPD channels
- › G8E (PMR446 only)
24 PMR446 channels (8+16 pre-set)

DESCRIPTION OF THE CONTROLS AND FUNCTIONS

Display

Your **Midland G8** keeps you constantly updated about its operational status through a Liquid Crystal Display (LCD). The symbols and their corresponding parameters that may appear, according to the operational status of the device, are described as follows:

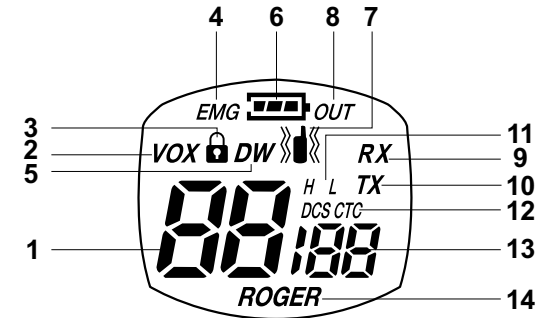


- | | |
|---|---|
| <ol style="list-style-type: none"> 1. CHANNEL 2. VOX 3. 🔒 4. EMG 5. DW 6. 🔋 7. 📞 8. OUT 9. RX 10. TX 11. H(High) / L(Low) 12. CTCSS/DCS 13. CTCSS/DCS 14. ROGER | <p>These two large digits indicate the selected channel</p> <p>VOX function activated</p> <p>This symbol appears when the keypad lock is activated</p> <p>Emergency function activated</p> <p>Dual Watch activated</p> <p>Indicates the battery status</p> <p>Vibra-CALL function activated</p> <p>Indicates if the Automatic Out of Range function loses contact with the other radios.</p> <p>Reception mode</p> <p>Indicates the transmission(PTT pressed);</p> <p>High or low power selection.</p> <p>Indicate the type of sub audio tone selected.</p> <p>These three small digits indicate the code of the CTCSS/DCS tones selected (1-38 / 1-104)</p> <p>Roger Beep activated.</p> |
|---|---|

Radio

Refer to this picture to identify the various parts of the device:

- 15. Built-in speaker** Here is where the speaker is housed.
- 16. MENU button** Press this button to enter the radio's **MENU**.
- 17. CALL/🔒 button** To send a **CALL** on the selected channel. If you keep it pressed for about 5 seconds, the keypad lock is activated.
- 18. PTT (push to talk)** Push this button to transmit.
- 19. VOLUME knob** On/off switch for the device and adjusts **VOLUME** of reception.
- 20. ANTENNA** Receives and transmits radio signals.
- 21. Accessory socket** (under protective cover) To connect to external audio devices such as microphones, chargers, etc. (2pin type)
- 22. EMG button** To activate the Emergency and the Manual Out of range functions.
- 23. ▲ ▼ buttons** To change the setting within the **MENU**
- 24. Built-in microphone** Here is where sound is picked up by the microphone.
- 25. Intercom plug** To connect to headset/mike accessories suitable for intercom communications.

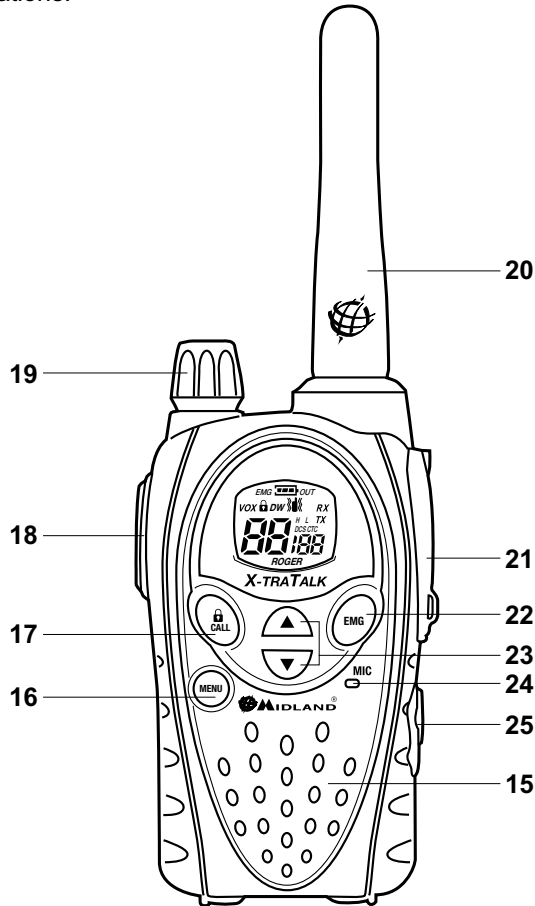

Turning on/off

To turn on the transceiver, turn the **VOLUME** knob clockwise until you hear it clicks.

To turn off the transceiver, turn the knob counter-clockwise.

Selecting the PMR466 or LDP band (only for the dual band version)

Midland G8 (Dual band) is pre-set at factory on the PMR446 band.

To switch to the LPD band, keep pressed the **MENU** button until the LPD shows channel '1'.

To return to the PMR446 band, keep pressed the **MENU** button again, until the LCD shows 'P1'.

! **This procedure disables the "EMG" function; therefore if you change the frequency band, remember to activate the Emergency function again (see paragraph "Emergency function").**

Channel selection

Press the **MENU** button. The number of the channel will start flashing on the display. Press the scroll buttons ▼▲ till you select the desired channel. Press the **PTT** button to confirm, or wait for 5 seconds.

According to the version you bought, you can choose amongst the following channels:

- › **Dual band version:** PMR446 from P1 to P8 and from 9p to 24p (pre-set) / LPD from 1 to 69.
- › **E version (PMR446 only):** from P1 to P8 and from 9p to 24p (pre-set)

! **Channel P8 has been set at factory for the "Emergency" function; we suggest that you do not use it for general communications!**

Displaying the channel/sub audio tone

To momentarily display the PMR446 channel and the subaudio tone used in the pre-set channels, go to the desired channel (from 9p to 24p) and keep pressed the ▼ for 3 seconds.

Transmission and reception

To transmit keep the **PTT** button firmly pressed. Wait for a fraction of a second then speak normally in the direction of the microphone and hold the device at a distance of about 5 cm; **TX** will appear on the display.

When you have finished, release the **PTT**.

When the radio is in reception mode (**PTT** released) you will automatically receive any communication. **RX** will be displayed.

VOLUME adjustment

Rotate the **VOLUME** knob till you reach the desired level.

"CALL"

Push the **CALL** button and you will send an audio signal to the users tuned on the same channel; you can choose amongst different **CALL** tones.

“Emergency”

When the Emergency function is enabled (**EMG** blinks on the display) keep pressed **EMG** for 3 seconds and you send an emergency **CALL** to the other G8 within your range.

The Emergency function is activated by default.

Keypad lock

Keep pressed **CALL/** for about 5 seconds. and **lock** will be displayed as confirmation. Only **PTT**, **EMG** and **CALL/** remain active. To disable this function, keep pressed again **CALL/** for 5 seconds approx.

MON (Monitor) function / Squelch

The Monitor button is for temporarily excluding (opening) the squelch, in order to listen to signals that are too weak to keep the squelch permanently opened.

To activate the monitor function, keep pressed for about 2 seconds both **▲▼** at the same time. Follow the same procedure to deactivate the function, or switch off and on the radio.

! **When MON is active, you will probably hear a constant background noise.**

! **You can activate the Monitor feature only if the “Emergency” function is disabled.**

Scanning all the channels

Midland G8 can automati**CALL**ly search for signals throughout the bands by scanning the channels in rapid sequence. This function is useful to find out any active channel. When a signal is detected, the scanning pauses on that channel for 5 seconds.

Press **▼** for 2 seconds: the scanning will start. To stop it, push **PTT**: the **Midland G8** will go back to the channel from which the scanning originally started.

! **You can activate the scanning feature only if the “Emergency” function is disabled.**

“MENU” key

The following features can be selected by using the “**MENU**” button:

- › Channel selection
- › CTCSS tone setting
- › DCS tone setting
- › High/low power selection (only in the PMR446 band)
- › VOX
- › Vibra**CALL** function
- › **CALL** melodies
- › Roger Beep
- › Keypad Beep
- › Emergency channel
- › Dual Watch function
- › Out of Range

Channel selection

Press the **MENU** button. The number of the channel will start flashing on the display. Press the scroll buttons **▼▲** till you select the desired channel. Press the **PTT** button to confirm, or wait for 5 seconds.

According to the version you bought, you can choose amongst the following channels:

- › **Dual band version:** PMR446 from P1 to P8 and from 9p to 24p (pre-set) / LPD from 1 to 69.
- › **E version** (PMR446 only): from P1 to P8 and from 9p to 24p (pre-set)
- ! **Channel P8 has been set at factory for the “Emergency” function; we suggest that you do not use it for general communications!**

CTCSS/DCS tone setting

CTCSS and DCS tones are similar to access codes and enable the radio to communicate only with the users that are tuned on the same channel and have set the same code. For each channel, you can set up to 38 CTCSS and 104 DCS tones.

These tones can be set on the following channels:

- › **Dual band version:** only on the 8 main PMR446 channels (from P1 to P8) and on the 69 LPD channels.
 - › **E version** (PMR446 only): only on the 8 main PMR446 channels (from P1 to P8)
- For both, the pre-set channels from 9p to 24p cannot be modified.

Activating the CTCSS tones:

- › Turn on the unit.
- › Select the desired channel by pushing the **MENU** button and the **▲▼** channels.
- › Press the **MENU** button till the display shows **CTC** and the CTCSS tone blinks on the right (“**of**”= no code – default condition).
- › Select the desired CTCSS tone by pushing **▲▼**.
- › To confirm the setting, push **PTT** or wait for 5 seconds.

Deactivating the CTCSS tones:

If you don’t want to use the CTCSS tones, follow these steps:

- › Select the desired channel
- › Press the **MENU** key till the display shows the CTCSS tone blinking on the left;
- › Select “**of**” by means of **▲▼**.

Activating the DCS codes:

- › Turn on the unit.
- › Select the desired channel by pressing **MENU** and **▲▼** keys.
- › Push the **MENU** button again till the display shows DCS and the tone code blinks on the right (“**of**”=no code – default condition).
- › Select the desired DCS code by pushing **▲▼**.
- › To confirm the setting, press the **PTT** or wait for 5 seconds.

! **Channel P8 with DCS tone 50 (P850) has been set at factory for the “Emergency” function; do not use it for general communications!!**

Deactivating the DCS codes:

- › Select the desired channel.
- › Press the **MENU** key till the display shows the channel in use and the DCS code blinks on the right.
- › Select “**oF**” by pushing **▲▼**.

Hi/low power selection (only in PMR446 band)

To select the power level, press the **MENU** button till the display shows *Pr*. Use **▲▼** to select **L** (low power) or **H** (high power). To confirm your selection, push **PTT** or wait for 5 seconds.

When the batteries are fully charged, the high power is 500 mW (ERP), while the low is 10mW (ERP).

If your radio has to operate within a short range, you can select the low power and therefore extend the battery life.

VOX function

Midland G8 enables hands free conversations through the VOX function: just speak in the direction of the microphone and the communication will be automati**CALLY** activated.

The VOX sensitivity can be adjusted in 3 different levels. You can enable the VOX function with or without accessories.

The fourth level activated is the **Vox TalkBack**: if one radio is continuously transmitting in VOX, the **VOX TB** will automati**CALLY** stop the transmission after 20 seconds to allow the transmission to the other users as well.

To activate the VOX function press the **MENU** button till **VOX** appears on the display.

Use **▲▼** to select the sensitivity levels:


- › **Of: Off;**
- › **1: High**
- › **2: Middle**
- › **3: Low**
- › **4: Talk Back** (with high sensitivity)

To confirm your selection, press **PTT** or wait for 5 seconds.

To disable the VOX function, follow the procedure here above indicated and select **oF**.

Vibra-CALL function

Midland G8 is equipped with the “Vibra-CALL” feature, which provides a silent alert for incoming **CALLS**.

To activate this feature, press the **MENU** button until the display shows ; use the **▼▲** buttons to disable or enable this feature (**on**: enables, **oF**:disables);

Push **PTT** [11] to confirm or wait for 5 seconds.

CALL feature

Midland G8 can send 5 different **CALL** tones. To send this audio signal to other users, press the **CALL/📞** key.

To select the **CALL** tones:

Press **MENU**, until the display shows “**CA**” and the active tone code.

By pushing **▲▼** you will hear the 5 pre-set melodies.

Confirm by pressing **PTT** or wait for 5 seconds.

ROGER BEEP (End transmission tone)

When the **PTT** button is released, the radio will beep to confirm to other users that your transmission has finished.

In the **Midland G8** this function is factory disabled.

To activate it:

Press the **MENU** button until the display shows “**rb oF**”; using the scroll buttons **▼▲** select “**on**” and “**rb on**” will be displayed; to confirm the roger beep activation, press **PTT** or wait for 5 seconds.

Keypad Beep

Everytime a button is pressed, you will hear a beep.

To disable the beeps, follow this procedure:

- › Press **MENU**, till the display shows “**bP on**”.
- › Push **▲▼** till “**bP oF**” is displayed.
- › Confirm your selection by pushing **PTT** or wait for 5 seconds.

In this way, all beeps and tones are disabled.

To enable the keypad beep, repeat this procedure and select “**bP on**”

Emergency CALL function

The **Midland G8** dedicates a channel to the Emergency **CALLS**: all the G8 operating within your range, even if tuned on different channels, can receive/transmit Emergency messages on that channel.

If you keep pressed the **EMG** button, the communications automati**CALLY** switch to the emergency channel (“**EC**” on the display). An audio signal will be sent and all the G8 operating within the range will automati**CALLY** go to the Emergency channel (“**EC**”).

If you have disabled this function, you won’t receive/transmit any Emergency **CALL**.

! When the radio is operating on the Emergency channel (EC displayed), all the buttons except PTT and CALL are disabled.

The G8 will return to the channel in use after one minute from the last transmission.

To return immediately, push **EMG**. Now you can use all the **MENU** functions.

Activating / Deactivating the Emergency feature

When you switch on the unit, the Emergency function is activated, but you can disable and enable it again:

Press **MENU** till the display shows **EC on**.

Select **EC** of by using **▲▼**. Confirm your selection by pushing **PTT** or wait for 5 seconds.

! When the Emergency function is activated (EMG blinking on the display) the following functions cannot be used: Scan, Monitor, Dual Watch, Out of

Range.

Changing the emergency channel

The emergency channel originally preset is P8 DCS 50; but you can change it according to your needs.

! **Important: be sure that the Emergency function is active! (EMG blinking). If you decide to change the channel dedicated to the Emergency function, do not forget to make the same change to all the radios!**

Press the **MENU** button until the display shows **EC on**.

Push **MENU** again (**of** displayed) and select the desired channel by means of **▲▼**. To confirm press **PTT** or wait for 5 seconds.

! **Important: be sure that the Emergency function is active! (EMG blinking). If you decide to change the channel dedicated to the Emergency function, do not forget to make the same change to all the radios!**

To set again the original Emergency channel (P8 DCS 50)

Press the **MENU** button until the display shows **EC on**.

Push **MENU** again and select of

To confirm press **PTT** or wait for 5 seconds.

! **If you dedicate any of the standard channels to the Emergency function, remember to use it only for this purpose, otherwise you will cause interferences.**

Manual Out of range function

This function allows you to know if there are any radios within your range.

By pushing **EMG** twice, you will send a request of acknowledge to the other G8 operating within your range and tuned on the same channel.

If any radio replies, it means that it's within your range and you will receive an audio tone for confirmation.

! **This function can be used only if the “Automatic Out of Range” feature is not active.**

DUAL WATCH

The Dual Watch allows you to monitor constantly two channels of your choice at the same time.

Enabling - Disabling

Press the **MENU** button until the display shows **DW of**.

Select the second channel to monitor by pushing **▲▼**.

To confirm your selection, press **PTT** or wait for 5 seconds. The display will alternately show the channel in use and the second channel to monitor.

To stop the function, simply press **MENU**.

When the transceiver detects a transmission on one of the two channels, the Dual Watch temporarily pauses, remains tuned for 5 seconds on the corresponding channel, giving the user a chance to respond to a **CALL**. After this pause, the Dual Watch starts

again.

! **This function can be activated only if the “Emergency” feature is disabled.**

Automatic Out-of-Range

By setting this mode a pair of G8 is transmitting every 30 seconds a data control code. As soon as the contact between both units is getting lost and one radio doesn't receive this data control code twice consecutively, the icon **OUT** starts flashing in the display and you will hear a beep tone.

! **This function can be activated only if the “Emergency” feature is disabled.**

Activating – Deactivating

Press **MENU** till the display shows “**OUT**” and “**Or of**”, select “**Or on**” (activated) with the **▲▼** buttons.

Switch off both radios.

Turn them on at the same time.


To disable this function, push **MENU** till “**OUT**” and “**Or on**” are displayed; select “**Or of**” (disabled) with the **▲▼** buttons.

Confirm your selection by pushing **PTT** or wait for 5 seconds.

Display illumination

If there is insufficient light to read the display, press briefly **EMG** and the display illumination will activate for about 5 seconds. Every time the **MENU** is pressed, the display will automati**CALL**ly light up.

Power save

The battery power saving feature enables a reduction in the consumption of up to 50%; power saving comes on automati**CALL**ly when the transceiver does not receive any signal for more than 7 seconds. When the batteries are discharged, the icon  appears on the display: replace the batteries or recharge the battery pack.

! **The power save is active only if the Emergency function is disabled.**

Battery recharge

The supplied battery pack is NiMH type 4.8V 800mAh and must be recharged only when it's inserted in the radio; it takes 8 hours to fully recharge.

To recharge the battery pack:

Connect the socket of the wall adaptor to a mains power socket and insert the jack of the wall adaptor into the desktop charger plug.

Place your transceiver into the cradle of the desktop charger. The red led of the charger will light up.

When charging is complete take the transceiver out of the cradle and detach the socket of the wall adaptor from the mains.

! **Do not overcharge the batteries! When these are fully charged the charging process does not stop automati**CALL**ly. Do not forget therefore, to remove the transceiver from the charger as soon as the batteries are charged, otherwise the radio and batteries may be damaged.**

- ! Do not try to charge alkaline batteries or non rechargeable batteries. Make sure that when you charge the radio, only rechargeable NI-MH batteries or the supplied battery pack should be contained in the battery compartment! Alkaline batteries are not rechargeable! Batteries which are not suitable to be recharged may leak, explode or even burn and cause damage!***
- ! Using a different battery charger other than the one specified can cause damage to your device or may even cause explosions and personal injuries.***
- ! Do not throw batteries into fire or place them near heat as this may cause explosions or personal injuries. Dispose of the batteries according to the procedures set out by local regulations.***
- ! Do not mix old and new batteries or batteries of different types or batteries which have been used in different manners.***