


MANUALE - KIT 01

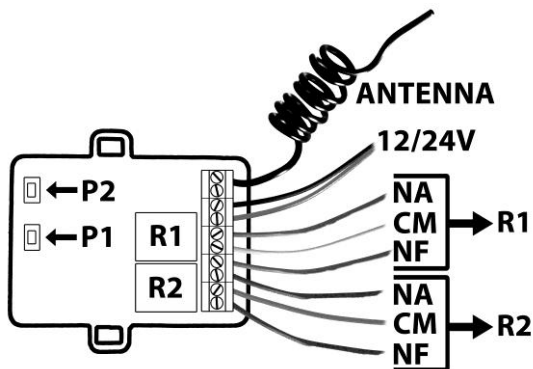

PROGRAMMAZIONE:

Premere **P1**:

- 1 volta per programmare **R1** in modalità monostabile
 - 2 volte per programmare **R2** in modalità monostabile
 - 3 volte per programmare **R1** in modalità bistabile
 - 4 volte per programmare **R2** in modalità bistabile
- tenere premuto il tasto del radiocomando che si vuol acquisire fino a che il led inizi a lampeggiare.

CANCELLAZIONE:

Sono disponibili due tipi di cancellazione


1. Cancellazione di un singolo codice:

Premere il tasto **P2** per circa 2 secondi (rilasciare il tasto); il led si accenderà, premere il tasto del radiocomando che si vuole cancellare.

2. Cancellazione di tutti i codici acquisiti:

Premere **P2** fino a che il led si accenda (circa 8 secondi).

MANUAL - KIT 01

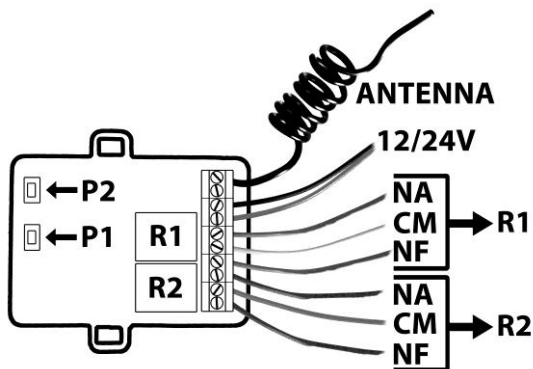

PROGRAMMING:

Press the **P1**:

- 1 time to program **R1** in monostable mode
- 2 times to program **R2** in monostable mode
- 3 times to program **R1** in bistable mode
- 4 times to program **R2** in bistable mode

hold down the key of the radio remote control that you would like to acquire until the led blinks.

ERASING:

There are two ways of erasing

1. Erasing a single code:

Press **P2** for about two seconds (release the key); the LED will light up, press the key on the radio remote control that you want to delete.

2. Erasing all codes acquire:

Press **P2** until the LED turns on (about 8 seconds).